 


MODELS R-20B

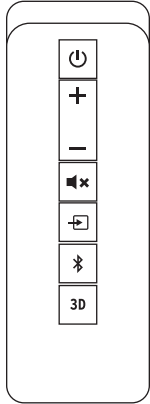


	Power	807F 1AE5
	Volume Up	807F 03FC
	Volume Down	807F 06F9
	Mute	807F 01FE
	Source	807F 02FD
	Bluetooth™	807F 0DF2
	3D	807F 04FB

INSTALLER CODES

Optical	807F 0CF3
Bluetooth™	807F 0DF2
Analog RCA	807F 0EF1
Sleep	807F 1EA5

 MODELS R-10B • SB-1 • SB-3 • CS-30 • PowerBar • PowerBar Elite • Torsten

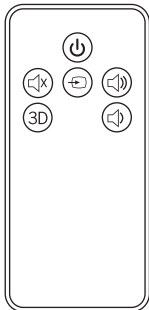


	Power	807F 1AE5
	Mute	807F 01FE
	Source	807F 02FD
	Volume Up	807F 03FC
	Volume Down	807F 06F9
	3D (or 360)	807F 04FB

INSTALLER CODES*

Optical	807F 0CF3
Bluetooth™	807F 0DF2
Analog RCA	807F 0EF1
Sleep	807F 1EA5

*Codes only work with the R-10B, CS-30.
Other models pending.

 
MODELS BTS 2.1 • PowerBase • SB-120

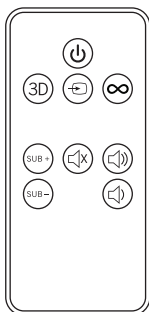

	Power	807F 1AE5
	3D	807F 01FE
	Source	807F 02FD
	Bluetooth™	807F 03FC
	Mute	807F 08F7

	Volume Up	807F 09F6
	Volume Down	807F 1FE0
	Sub Vol. Up	807F 07F8
	Sub Vol. Down	807F 0AF5

MODELS	PowerBar One
---------------	--------------

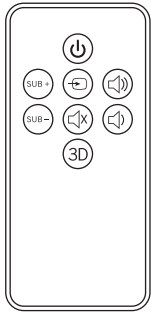 

	Power	807F 1AE5
	3D	807F 08F7
	Source	807F 02FD
	Mute	807F 05FA

	Volume Up	807F 03FC
	Volume Down	807F 06F9
	Sub Vol. Up	807F 01FE
	Sub Vol. Down	807F 04FB

UNIVERSAL REMOTE CODES*	Volume Up, Volume Down, and Mute Only
--------------------------------	---------------------------------------

RCA**	41609
One for All	1609
	0531
AT&T	5144

Bright House	048
DirecTV	31609
	30531
Xfinity***	30531

* Codes only work with the R-10B, R-20B, and CS-30. Other models pending. (Torsten, SB 120, PowerBase)

** Must have Audio-Aux Button

*** Red Center Button