 


FIRMWARE UPDATE INSTRUCTIONS

 
1

Copy the "three.hex" file to an empty USB Flash Drive (FAT32 format).

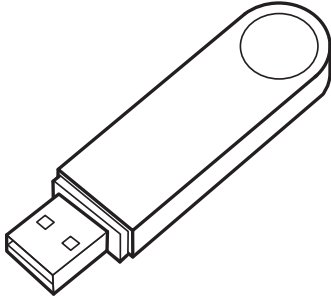


2

Turn the Power Switch "OFF" and unplug the Power Cord.

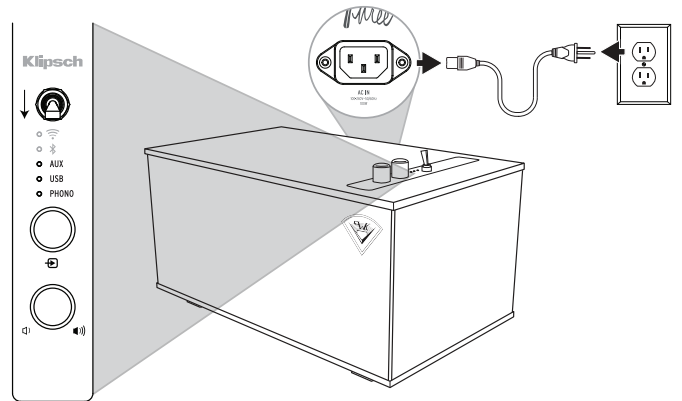


3

 Insert the USB Flash Drive into the USB port on the back panel of the Three.

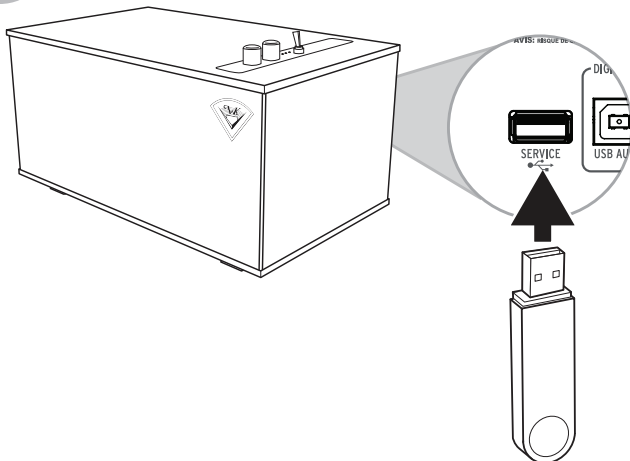


4

 Plug in the Power Cord. DO NOT turn on the Power Switch.

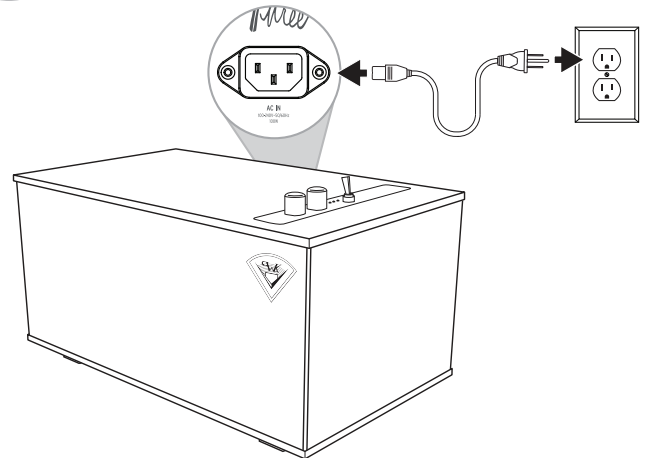

5

 The WiFi LED will flash as the update installs. The WiFi LED will turn off when the update is complete (if the update fails, the Bluetooth LED will flash).

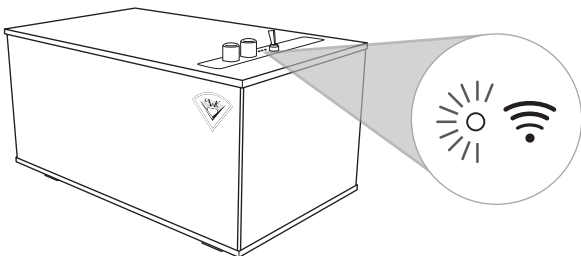

6

Unplug the Power Cord and remove the USB Flash Drive. The unit should now be updated - plug in the Power Cord and operate normally.

